

396-100011

TT-200



Installation Instructions:

1. Remove depth gauge wheels and disc's, taking note of shim placement
2. Remove factory seed tube guard
3. Lift TT-200 up into position on row unit
4. Align roll pin holes and install roll pins
5. Re-Install seed tube
6. Re-Install disc openers taking care to get the correct shim placement
7. Re-Install depth gauge wheels