

396-100012

TT-008 Seed Bounce Flaps



Installation Instructions:

1. Drill a 1/8" hole through seed tube using supplied template. It is very important that this hole is drilled straight, so removing the seed tube and using a drill press is recommended
2. Insert the seed bounce flap pin into one of the above holes and twist seed bounce flap up into position, snapping the other side of the roll pin into the adjacent hole
3. Re-Install seed tube

